



Official Lane Maintenance and Capital Equipment Provider



ENVOY



AUTHORITY22®

Pattern Information

Date, Pattern Type, Pattern Difficulty (Medium), Pattern Designer, Pattern Volume (ml) 19,97

Surface Information

Surface Type (Synthetic), Surface Brand (Brunswick Pro Lane), Age

Pattern Parameters

Pattern Number, Pattern Name, Mode, Forward Speed (Quick Clean), Start Cleaner Spray (0), Start Squeegee (0), Start Oiling (6), Split Pattern (No)

Supplies Information

Lane Cleaner, Cleaner Mixture Ratio (: 1), Cleaner Transition Distance (45), Cleaner Spray End Distance (51), Lane Conditioner

Notes

Table with 8 columns (Zone 1-8) and 3 rows (Zone End Distance, Zone Ratio L/R, Zone Volume (ml)).

Table with columns for ZONE (1-8), 7 Pin Side (L1-L17), Board Number (L18-L19, C20, R19-R17, R16-R14, R13-R11, R10-R8, R7-R5, R4-R3, R2-R1), and 10 Pin Side (R1-R8).

